COLDNet Profile – Adding Water Levels

1. Open the earlier project that we created called **WalkthroughCSVImport**
2. Select **File>Save As** and give the new project the name **AddingWaterLevels**
3. Once returned to the main form select the **Profiles** option from the top toolbar menu. A new window will open
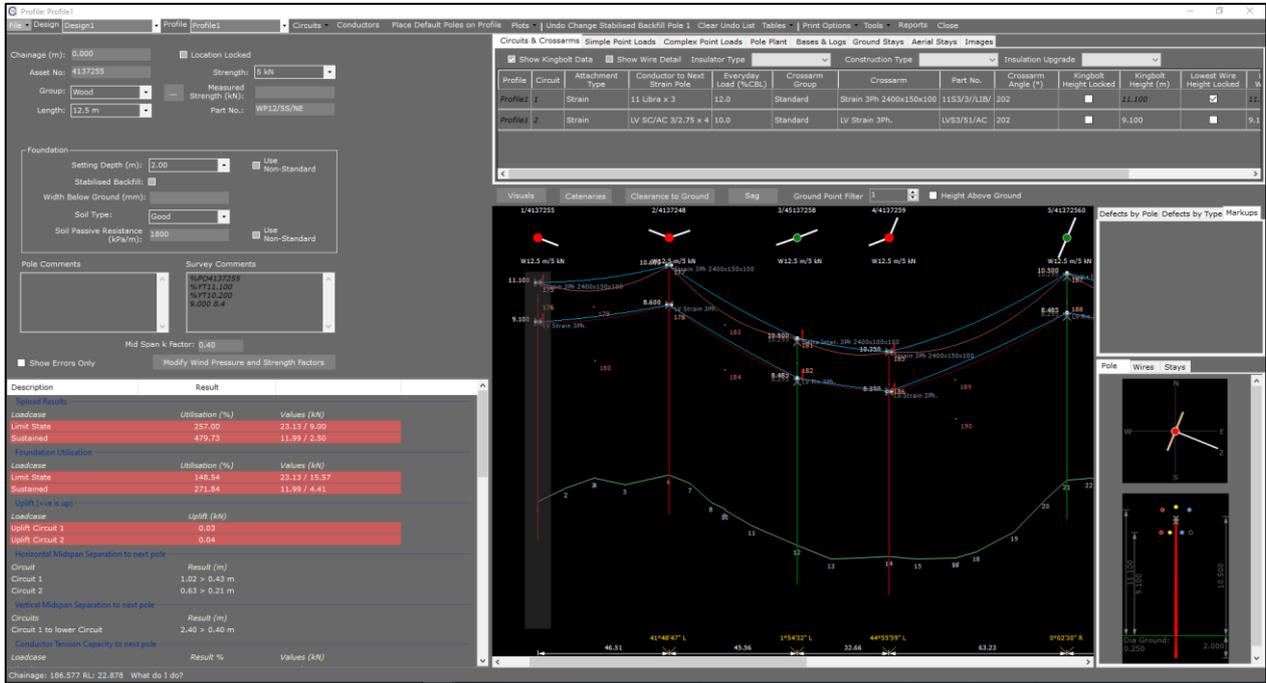
4. Right mouse-click and select **Water Levels> Add Water Levels**. A new window will open
5. Enter the **Name "Water Line"**
6. Enter an **Elevation** of **'7'**.
7. Enter a **Clearance Value** of **'3'**
8. Select **Save**. The water level will now appear on the elevation view as seen below. You will need to make sure you have selected **Show Water Levels** under **Visuals.** Water levels can also be edited and deleted by right mouse-clicking over the water level and selecting **Edit Water Level** and **Delete Water Level** respectively